

---

**CONTROL DATA®**  
**FINCH<sup>TM</sup> DISK DRIVE**  
**MODEL 9410-4**

**GENERAL DESCRIPTION  
OPERATION  
INSTALLATION AND CHECKOUT**

---

 **MAGNETIC PERIPHERALS, INC.**  
a Control Data Company

**VOLUME 1**

**HARDWARE INSTALLATION/OPERATION MANUAL**

---

**CONTROL DATA®**

**FINCH<sup>TM</sup> DISK DRIVE**

**MODEL 9410-4**

**GENERAL DESCRIPTION  
OPERATION  
INSTALLATION AND CHECKOUT**

---

 **MAGNETIC PERIPHERALS, INC.**  
a Control Data Company

**VOLUME 1**

**HARDWARE INSTALLATION/OPERATION MANUAL**



COPYRIGHT © 1982  
MAGNETIC PERIPHERALS INC.  
Printed in the United States of America  
All Rights Reserved

ii



## PREFACE

---

This Manual provides the information needed to install and operate the CDC Model 9410-4 FINCH™ Disk Drive (BJ9A2-A) and is intended to serve customer engineers and operators.

The total content of the Manual is comprised of three sections, each having a unique publication number, and is contained in one volume. The manual's publication number, (77715816) along with the unit series code number, should be used when making reference to the FINCH Disk Drive Installation/Operation Manual.

The following table identifies the content of this manual:

<u>SECTION NUMBER</u>	<u>TITLE</u>	<u>PUBLICATION NO.</u>
1	General Description	77715817
2	Operation	77715818
3	Installation and Checkout	77715819

### EMI NOTICE

**NOTICE:** This equipment has been designed as a component to high standards of design and construction. The product, however, must depend on receiving adequate power and environment from its host equipment in order to obtain optimum operation and to comply with applicable industry and governmental regulations. Special attention must be given by the host manufacturers in the areas of safety, power distribution, grounding, shielding, audible noise control, and temperature regulation of the device to insure specified performance and compliance with all applicable regulations. This equipment is a component supplied without its final enclosure and therefore is not subject to standards imposed by FCC Rules for Electro-Magnetic Interference (EMI). Federal Docket 20780/FCC 80-148 Part 15.

## TABLE OF CONTENTS

---

SECTION	PAGE
PREFACE .....	iii
EMI NOTICE .....	iii
GENERAL DESCRIPTION	
1.1 INTRODUCTION .....	1-1
1.2 GENERAL DESCRIPTION .....	1-1
1.2.1 Standard Features .....	1-1
1.2.2 Optional Capacities .....	1-1
1.2.3 Accessories .....	1-2
1.2.4 Major Components .....	1-2
OPERATION	
2.1 INTRODUCTION .....	2-1
2.2 OPERATING & PRELIMINARY DIAGNOSIS PROCEDURE .....	2-1
2.2.1 Operating Instructions .....	2-1
INSTALLATION AND CHECKOUT	
3.1 INTRODUCTION .....	3-1
3.2 UNPACKING .....	3-1
3.3 OPERATING ENVIRONMENT .....	3-2
3.4 SPACE ALLOCATION & MOUNTING REQUIREMENTS .....	3-2
3.5 MOUNTING ORIENTATIONS .....	3-6
3.5.1 Vertical Orientation Mounting .....	3-6
3.5.2 Horizontal Orientation Mounting .....	3-6
3.6 DRIVE CABLING .....	3-9
3.7 UNIT SELECTION /TERMINATION .....	3-11

## 1.1 INTRODUCTION

The CDC 9410-4 FINCH™ Disk Drive, hereinafter called FINCH, is a small, low-cost, medium-performance, random-access rotating-disk, mass-memory device designed to record and recover data on up to two rigid eight-inch non-removable fixed disk media. The FINCH uses low-mass flying read/write heads attached to a precisely controlled rotary positioner. It has an unmatted data storage capacity of 8.24, 32 or 40 megabytes, depending upon configuration.

## 1.2 GENERAL DESCRIPTION

### 1.2.1 STANDARD FEATURES

The following are standard features of the FINCH Disk Drive:

- Full data recovery circuitry
- Sealed disk, head, and actuator chamber
- No preventive maintenance required
- LSI circuitry for high reliability
- Low audible noise for office environments
- Vertical (side) or horizontal (bottom) mounting
- Low power consumption
- Rotary voice-coil actuator
- Terminators

### 1.2.2 OPTIONAL CAPACITIES

The following optional capacities (factory-installed only) are available for the FINCH:

- 8, 24, 32 or 40 megabytes rigid fixed-disk data storage capacity





## 2.1 INTRODUCTION

There is only one mechanical function required of the operator: to ensure that power is applied. During routine computer operations, the operator should, of course, note any malfunctions or problems and report them.

## 2.2 OPERATING AND PRELIMINARY DIAGNOSIS PROCEDURE

Due to the sophisticated design and special equipment required to repair the FINCH, most repairs may only be effected at a properly equipped and staffed depot service and repair facility. These repair facilities will be capable of performing all warranty and routine repair activities.

Because there are no lamps for error or fault indication and no operator/drive interaction is required, operating systems must contain sufficient error reporting information to allow the operator to make preliminary diagnosis of problems. In other words, software must adequately inform the operator if any technical difficulties arise. In multi-unit installation, logical and physical identifications are necessary for the operator to identify a defective unit.

### 2.2.1 OPERATING INSTRUCTIONS

1. The following conditions must be met to initiate operation of the disk drive.
  - a. The DC power cable from the power supply must be connected.
  - b. Rotary-arm shipping lock must be in operating position.
2. The operating temperature of the drive is 50° to 104° F (10° to 40° C) with a maximum temperature change of 18° F (10° C) per hours.
3. Additional information on the drive can be found in the Product Specification, 77653332.
4. In case of a malfunction the unit is to be serviced only by trained personnel.



## 3.1 INTRODUCTION


This section provides the information and procedures necessary to install and check out the FINCH Disk Drive. The FINCH is designed, manufactured, and tested with a "Plug-in and Play" installation philosophy. Basically, this philosophy minimizes the requirements for a highly trained person to integrate a FINCH into their system.

## 3.2 UNPACKING

Visually inspect the shipping container for any obvious damage. During unpacking, exercise care so that any tools being used do not cause damage to the unit. As the drive is unpacked, inspect it for possible shipping damage. All claims of this type should be filed promptly with the transporter involved. If a claim is filed for damages, save the original packing materials.

### CAUTION

Do not disengage the rotary-arm shipping lock illustrated in Figure 1-1. Figure 3-1 shows the rotary arm shipping lock in the locked and operating positions. To prevent damage to the read/write heads or the disk itself, move the rotary-arm shipping lock to the operating position only after installation has been completed.

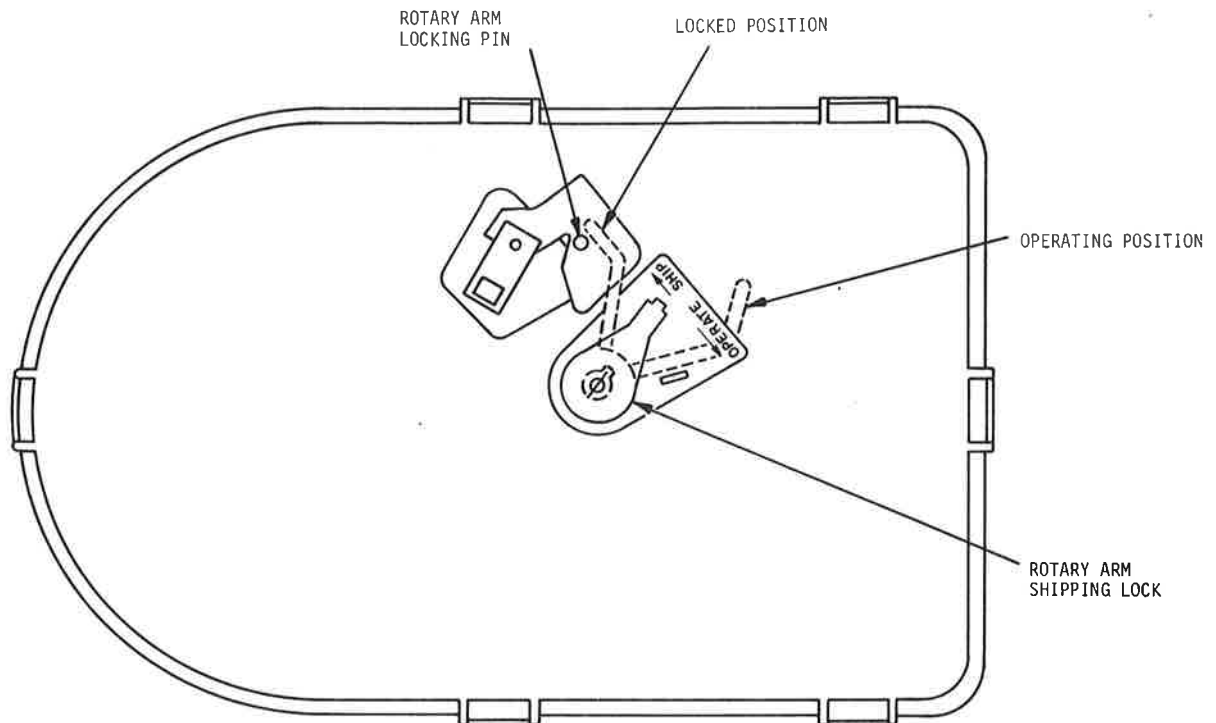

G282c

FIGURE 3-1. ROTARY ARM SHIPPING LOCK POSITION

After the drive is unpacked, inspect the drive for any visual internal damage (circuit boards, actuator assembly, and read/write heads). Compare all parts listed on the shipping bill with the received equipment. Discrepancies or damage should be reported to the Sales Representative. Save the packing materials; they can be used for reshipment.

### 3.3 OPERATING ENVIRONMENT


The environmental conditions required for optimum performance of the disk drive are, in general, the same as those in an office environment with minimum or no environmental control. These conditions are:

Temperature	50° to 104° F (10° to 40° C)
Humidity	20% to 80%
Altitude	-983 to +6,562 feet (-300 to +2,000 meters)

The room temperature should not change more than 18° F (10° C) per hour. Relative humidity should be kept between 20% and 80%. Avoid high relative humidity as much as possible since it can cause condensation in the drive. Very low relative humidity should also be avoided because it can lead to particle attraction and accumulation by static electricity.

### 3.4 SPACE ALLOCATION AND MOUNTING REQUIREMENTS

Figure 3-2 shows overall dimensions of the drive for determining space allocation and mounting requirements.

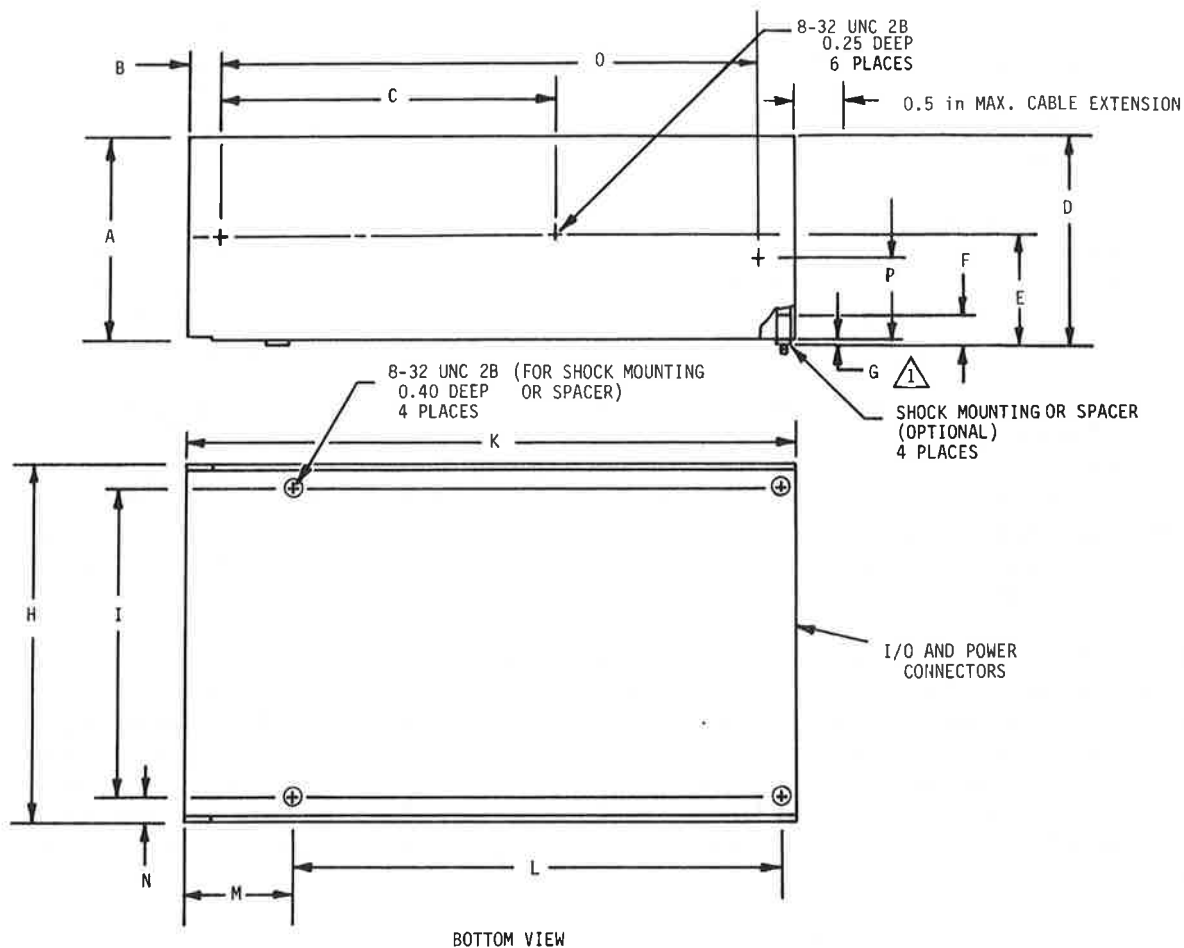

DIMENSION	INCHES	MILLIMETERS
A	4.62 ±0.02	117.35 ±0.51
B	0.80 ±0.02	20.32 ±0.51
C	8.00 ±0.04	203.2 ±1.02
D	4.62 ±0.03	117.35 ±0.76
E	2.49 ±0.02	63.25 ±0.51
F	0.50 NOMINAL	12.70 NOMINAL
G	0.06 NOMINAL	1.52 NOMINAL
H	8.56 ±0.02	217.42 ±0.51
I	7.30 ±0.06	125.42 ±1.52
K	14.00 ±0.06	355.6 ±1.52
L	11.65 ±0.04	295.91 ±1.02
M	2.05 ±0.03	52.07 ±0.76
N	0.63 ±0.02	16.00 ±0.51
O	12.90 ±0.02	327.66 ±0.51
P	1.55 ±0.02	39.37 ±0.51

G287a

1 NOMINAL SHOCK OR SPACER PROTRUSION

FIGURE 3-2. MOUNTING DIMENSIONS

Two mounting configurations are possible; either side-by-side in the upright horizontal position or in the vertical position with the nameplate to the top. Figure 3-3 shows these two mounting configurations. Detailed drive orientation information is contained in the Subsection 3.6, Drive Cabling.

The FINCH is designed for multiple unit installation in a standard 19-inch rack. Since the FINCH is a fixed drive, slides are not provided, but tapped holes are placed at various locations on the base casting for mounting in the enclosure. A maximum of two units can be mounted adjacent to each other horizontally, or three units if using the vertical mounting configuration.

The FINCH has an internal blower for cooling the Main PWA, Motor Control PWA, and mechanical components. This blower pulls air in through the hole in the Main PWA. For this reason, air flow to this blower shall not be restricted. If the drive is mounted to a solid mounting plate on the PWA side of the drive (horizontal mounting), the gap G (Figure 3-2) is the minimal allowable space for air flow. It is preferred that this gap be larger and/or the mounting plate have openings for air flow to the blower.

A sometimes overlooked consideration when mounting several drives in the same enclosure is heat dissipation. Because power supplies, for example, are typically heavy and produce large amounts of heat, they are usually mounted in the bottom of an enclosure. This heat rises to the top of the cabinet or enclosure and the temperature can increase drastically. Cabinet ventilation, either by natural convection or forced cooling, must be provided to keep the internal air temperature around the disk drive within the limits specified by the manufacturer.

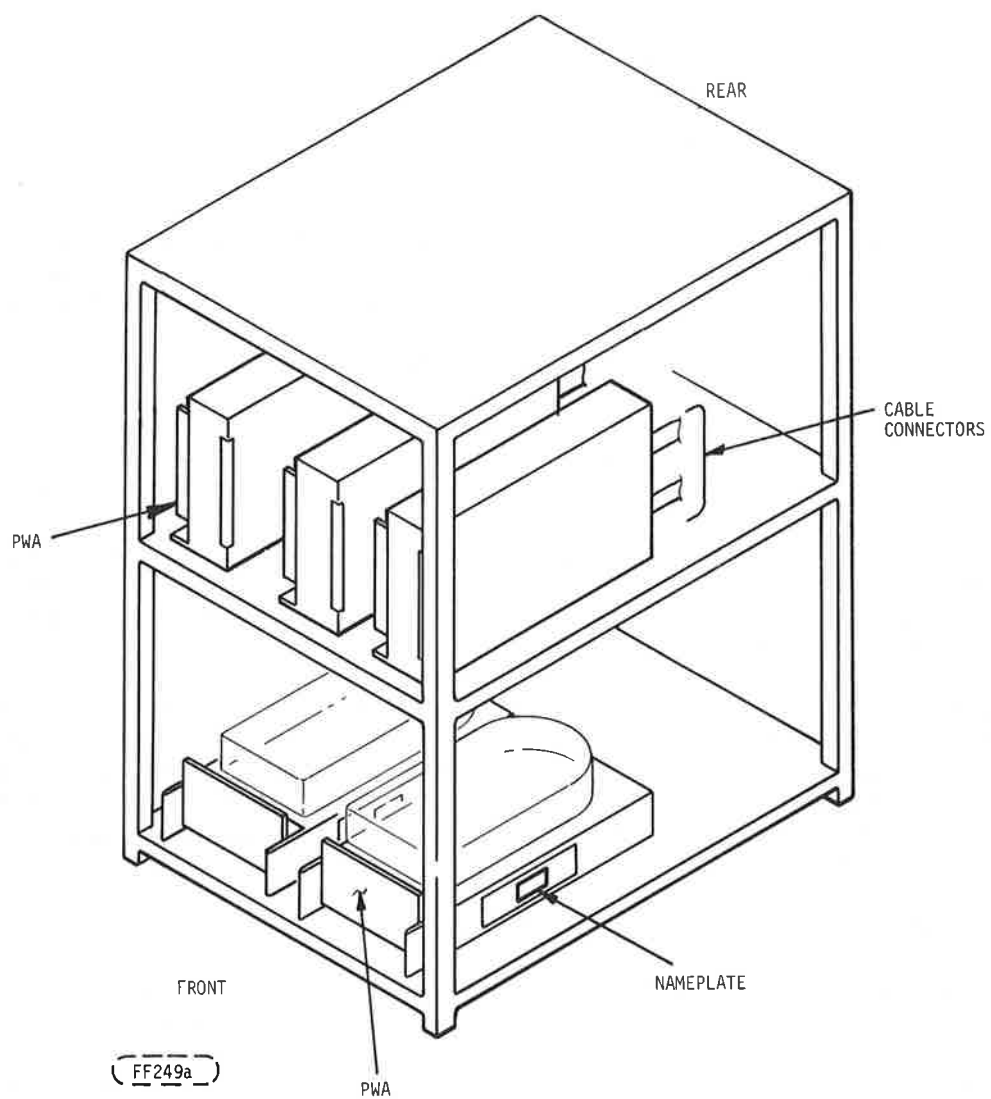


FIGURE 3-3. MOUNTING CONFIGURATIONS



## 3.5 MOUNTING ORIENTATIONS

### CAUTION

The drive should never be shipped or moved without the rotary-arm shipping lock locked to prevent damage to the disk and/or heads.

There are only two mounting orientations: disks in a horizontal plane and disks in a vertical plane. In either the horizontal or vertical mounting. The uppermost casting surface should be in a level position or drive performance may be affected.

### 3.5.1 VERTICAL ORIENTATION MOUNTING

In the vertical orientation, the drive must be mounted so that the heads are above the spindle as shown in Figures 3-4 and 3-5. This is to ensure that the read/write heads will return to the head landing area when power is removed.

Shock mounting in a vertical orientation is accomplished through the use of an optional shock mount plate. The drive is mounted to the shock mount plate and the shock mount plate to the cabinet. This configuration and mounting dimensions are shown in Figures 3-4 and 3-5.

Two tapped holes are provided on each side of the drive for securing the drive to the enclosure (cabinet). The drive may be bolted to an overhead member in a suspended mount and/or bolted from below in a supportive mount (Figure 3-3). Screws with 8-32 threads and sufficient length to allow several threads of engagement in the casting after passing through the cabinet mounting member should be used.

### 3.5.2 HORIZONTAL ORIENTATION MOUNTING

As shown in Figure 3-2, four 8-32 tapped holes are provided in the base of the main deck casting to facilitate mounting in the horizontal position.

The FINCH may be mounted with optional shock mounts or spacers directly to the rack using 8-32 thread screws. If shock mounts or spacers are used, screw the four mounts into their respective threaded holes as shown in Figure 3-6. Place the drive in the rack or cabinet and secure it with screws with sufficient length to ensure adequate thread engagement.



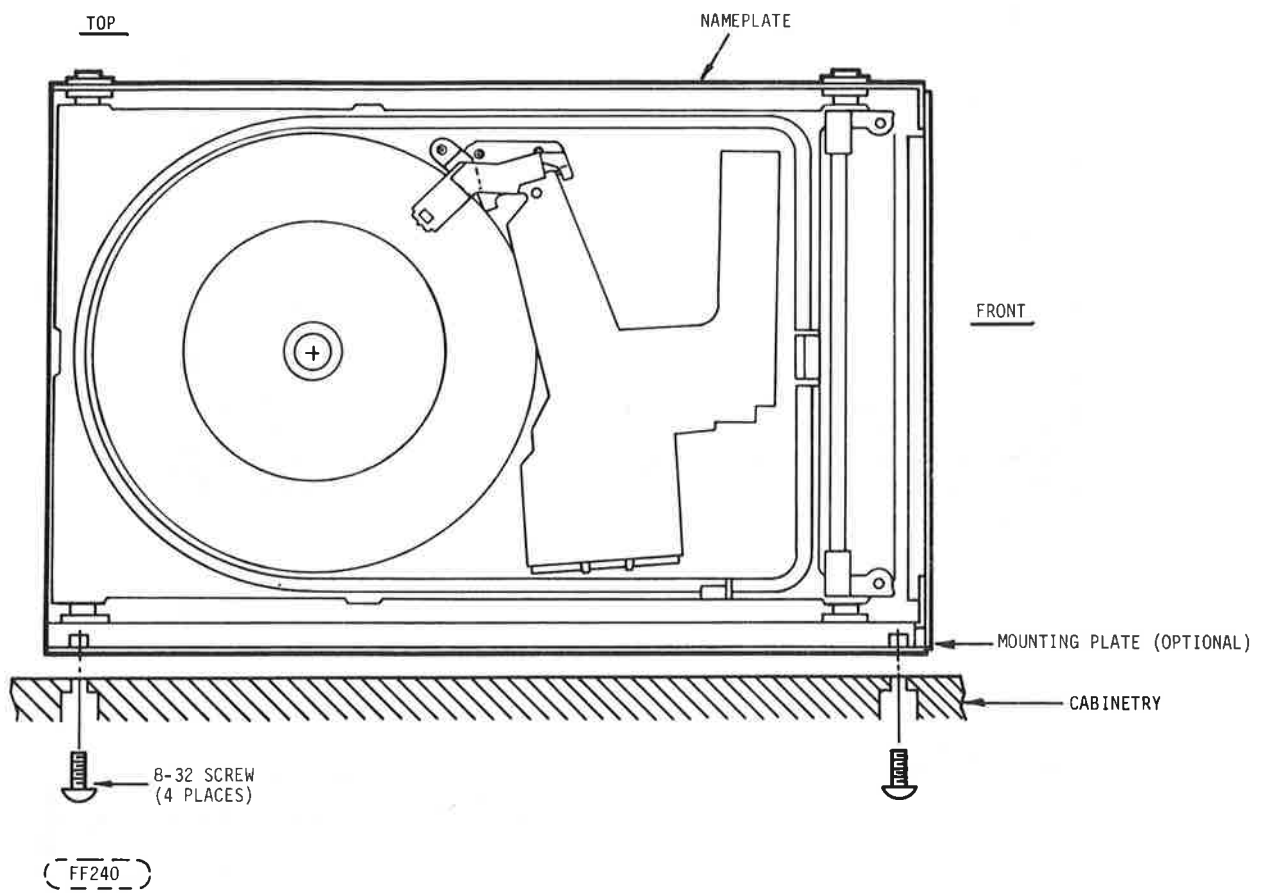


FIGURE 3-4. VERTICAL MOUNTING

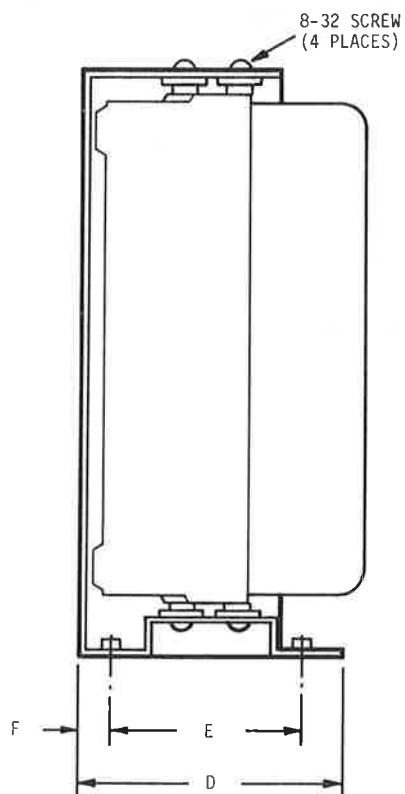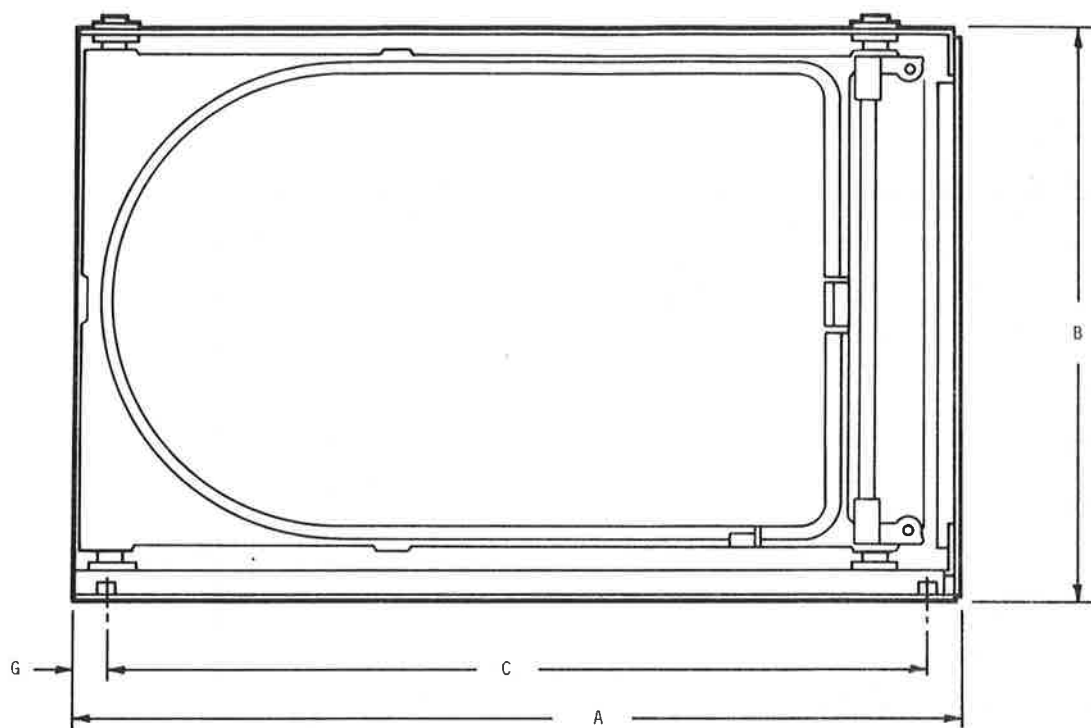

DIMENSION	INCHES	MILLIMETERS
A	14.56	369.82
B	9.50	241.30
C	13.50	342.90
D	4.28	108.71
E	3.10	77.70
F	0.50	12.70
G	0.56	14.22

(FF239)

FIGURE 3-5, VERTICAL SHOCK MOUNTING

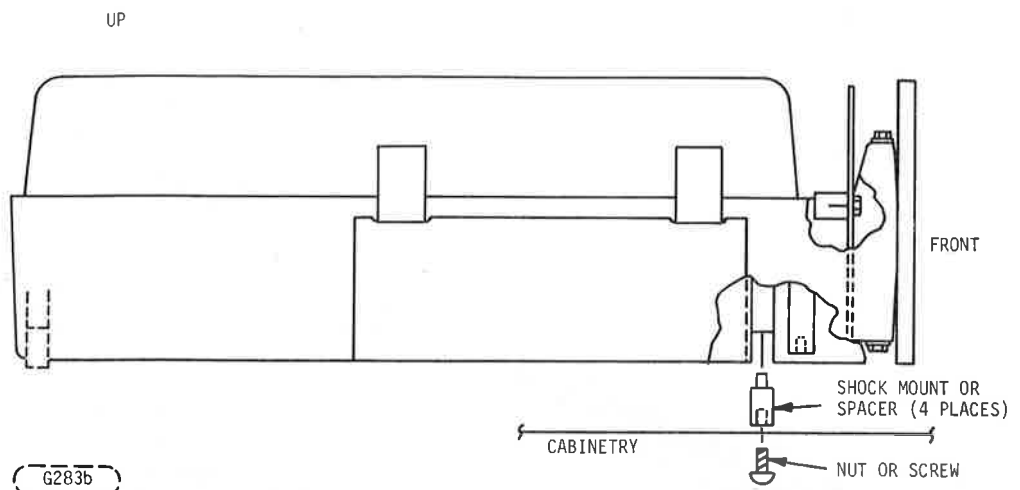


FIGURE 3-6. HORIZONTAL MOUNTING

### 3.6 DRIVE CABLING

The FINCH's digital interface is intended to utilize a single controller design capable of controlling both a FINCH and a flexible disk drive (FDD).

The required connections to the drive are power and signal cables. All input/output cables exit at the rear of the disk drive. The signal cables consist of a command interface and a data interface. Figure 3-7 shows the orientation of the command, DC power and data connectors.

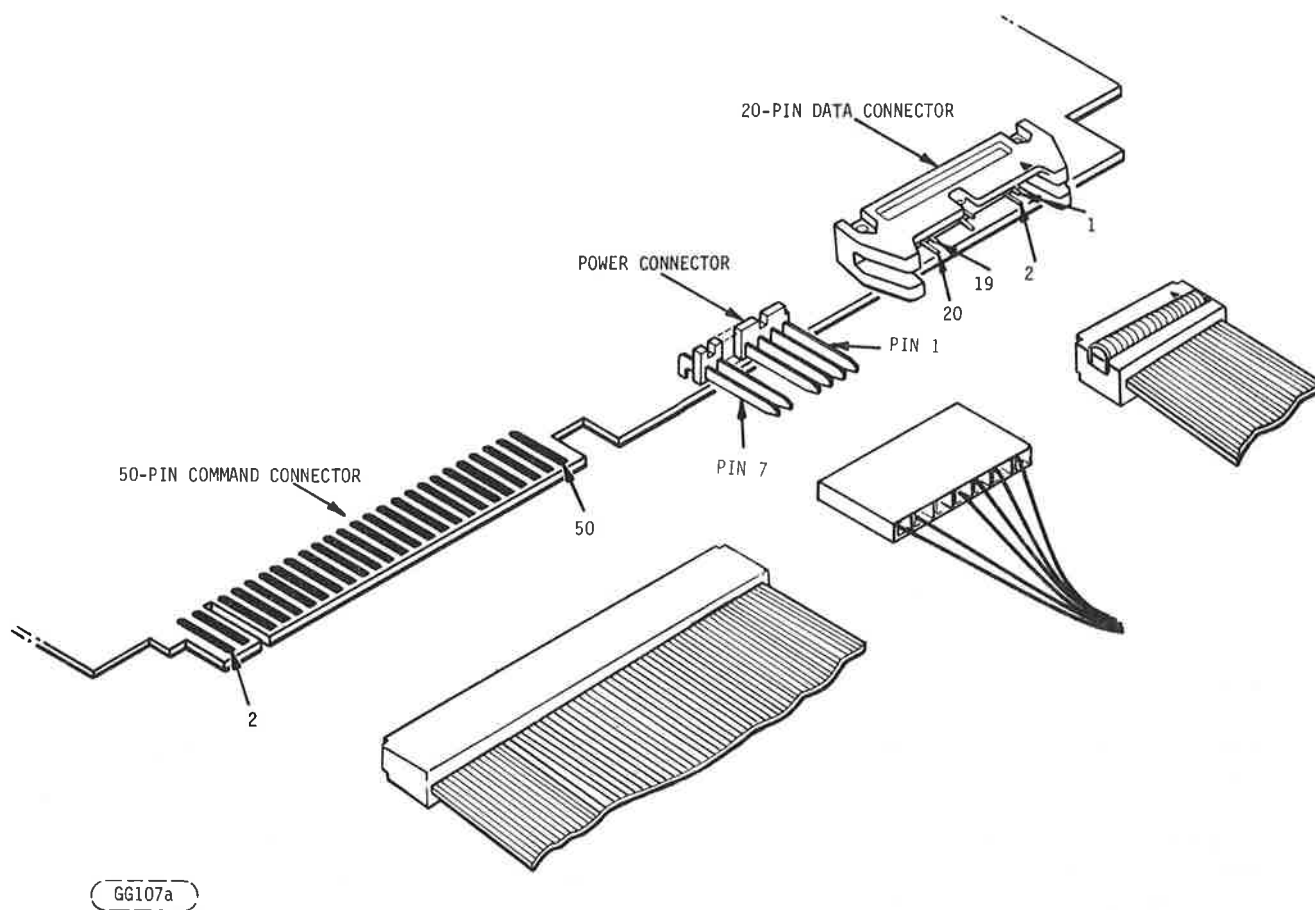


FIGURE 3-7. POWER AND SIGNAL CABLE ORIENTATION

Figure 3-8 shows the intercabling and terminator placement for the various drive connection arrangements. Shown are radial-cabled and daisy-chained system configurations. A single drive would be connected as shown for the radial configuration.

Terminator resistor packs are included in each drive. The terminators consist of a DIP resistor module which is plugged into a DIP socket in each drive. An equivalent terminator must be provided in the controller on each input signal line from the FINCH to the controller.

View A of Figure 3-8 shows each drive interfaced to its own Command cable, which, in turn, allows interfacing of more than four drives and a variety of system operational techniques. Each drive has its Data cable and Command cable radially connected to the host controller. The length of each individual cable must not exceed 20 feet (6.1 meters). Terminator resistors must be installed in the host controller for each Data cable and for each Command cable. If instead of all FINCH's there are FDD's plus FINCH's, then a terminator resistor pack also would be installed in each FDD for its Data/Command cable.

A daisy-chain configuration incorporates parallel interfacing of the disk drives on a common Command cable. A maximum of four drives may be daisy-chained on the Command cable. Only the drive which is selected by the host system has its control and data signals enabled through this common interface. View B of Figure 3-8 consists only of FINCH's. Terminator resistors are required in the host controller for each Data cable. Only the last FINCH in the daisy chain requires a terminator resistor pack for the Command cable; the others must be removed. The total combined Command cable length (from the controller to the first drive, to the second and subsequent drives) must not be more than 20 feet (6.1 meters).


View C of Figure 3-8 consists of a common controller for both FINCH's and FDD's. A maximum of four drives (any combination of FDD's plus FINCH's) may be daisy-chained on the Command cable. Terminator resistors are required in the controller and in the last drive in the daisy chain for the Command cable. Terminator resistor packs for the Command cable of other drives would be removed. A terminator resistor is required in the controller for each Data cable. The total combined Command cable length (from the controller to the first drive, to the second and subsequent drives) must not be more than 20 feet (6.1 meters). A FINCH must be the last drive in the daisy chain to ensure FINCH-unique lines are terminated.

### 3.7 UNIT SELECTION/TERMINATION

Logical unit designation is accomplished at the time of installation by selecting the appropriate jumper plug located on the baseboard assembly.

Unit selection is performed by installing a keyed jumper plug, onto the Unit Select header (J13). The plug can be installed in one of four possible orientations and will display the unit selected number to the rear of the drive (see Figure 3-9)

All other input lines to the FINCH are terminated only in the last drive on the daisy-chain. It is recommended that each FINCH on the daisy-chain terminate its own unit select line. This ensures that all drives will not be selected should the last drive in the line lose power. Termination of the Drive Select lines is accomplished by installing a shunt on the Drive Select termination jumper in the position which matches that to which the drive is selected (see Figure 3-10). Should the FINCH be daisy-chained with a FDD which does not provide its own termination of Drive Select, the Drive Select line for the FDD may be terminated by installing an additional jumper in the appropriate position on the last FINCH in the chain.

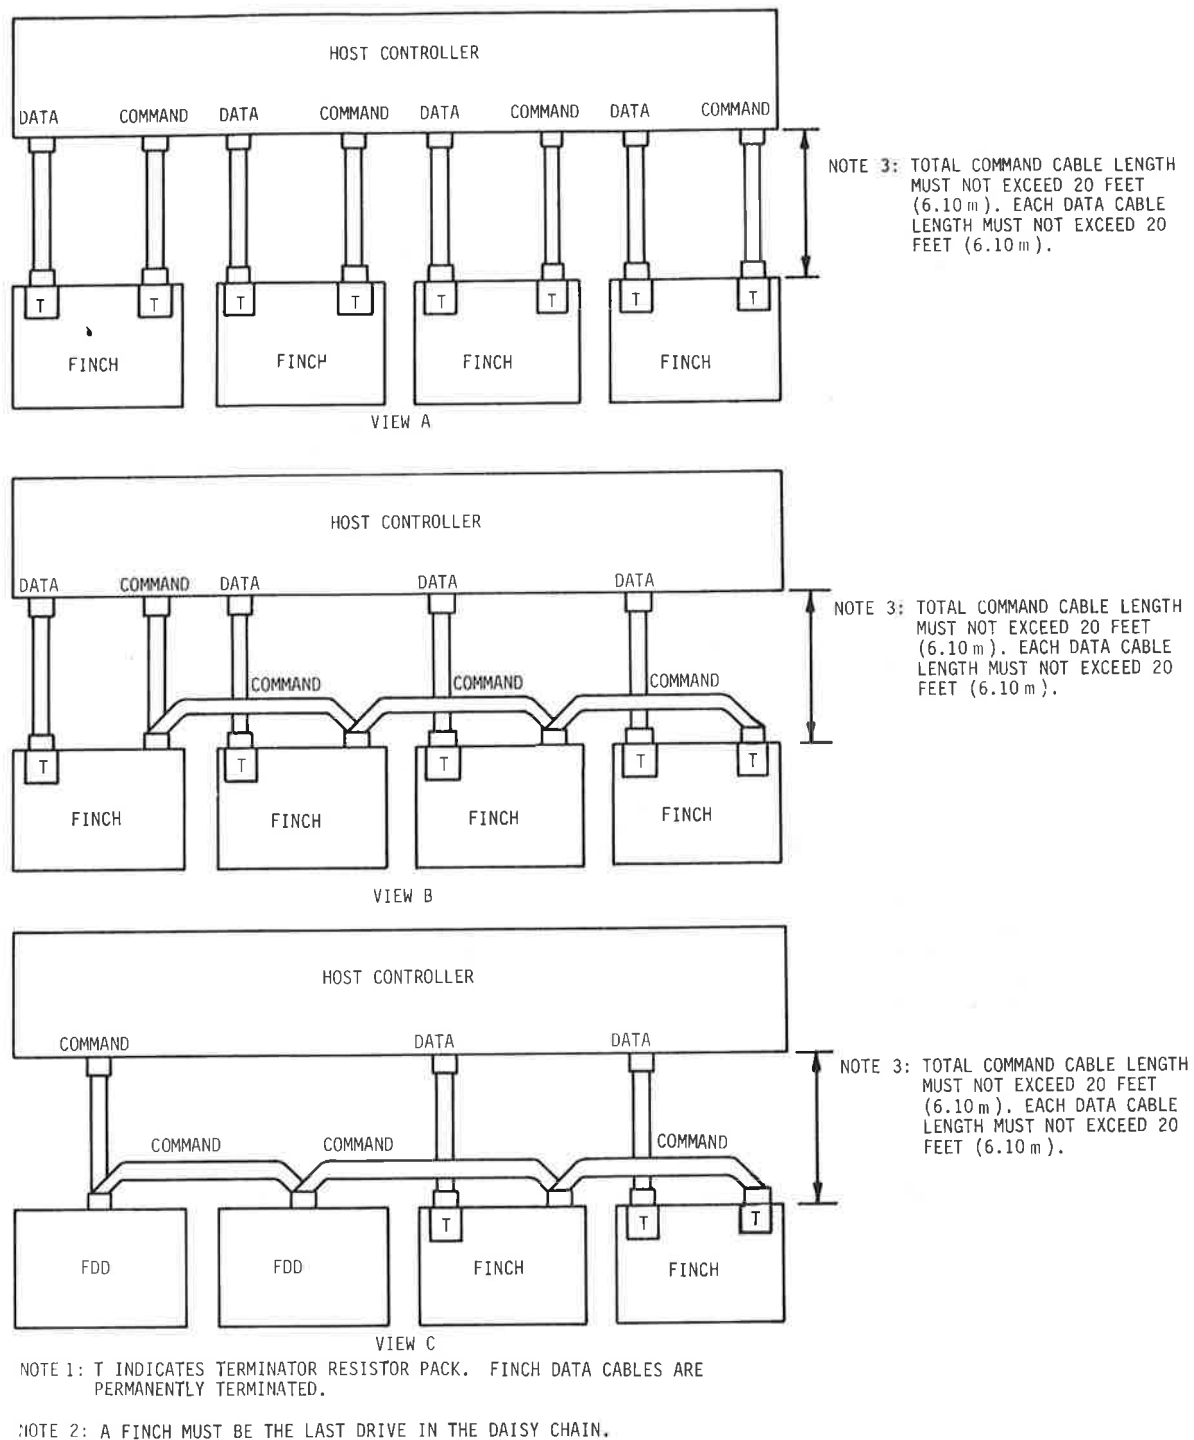

F214a

FIGURE 3-8. INTERFACE CABLING OPTIONS




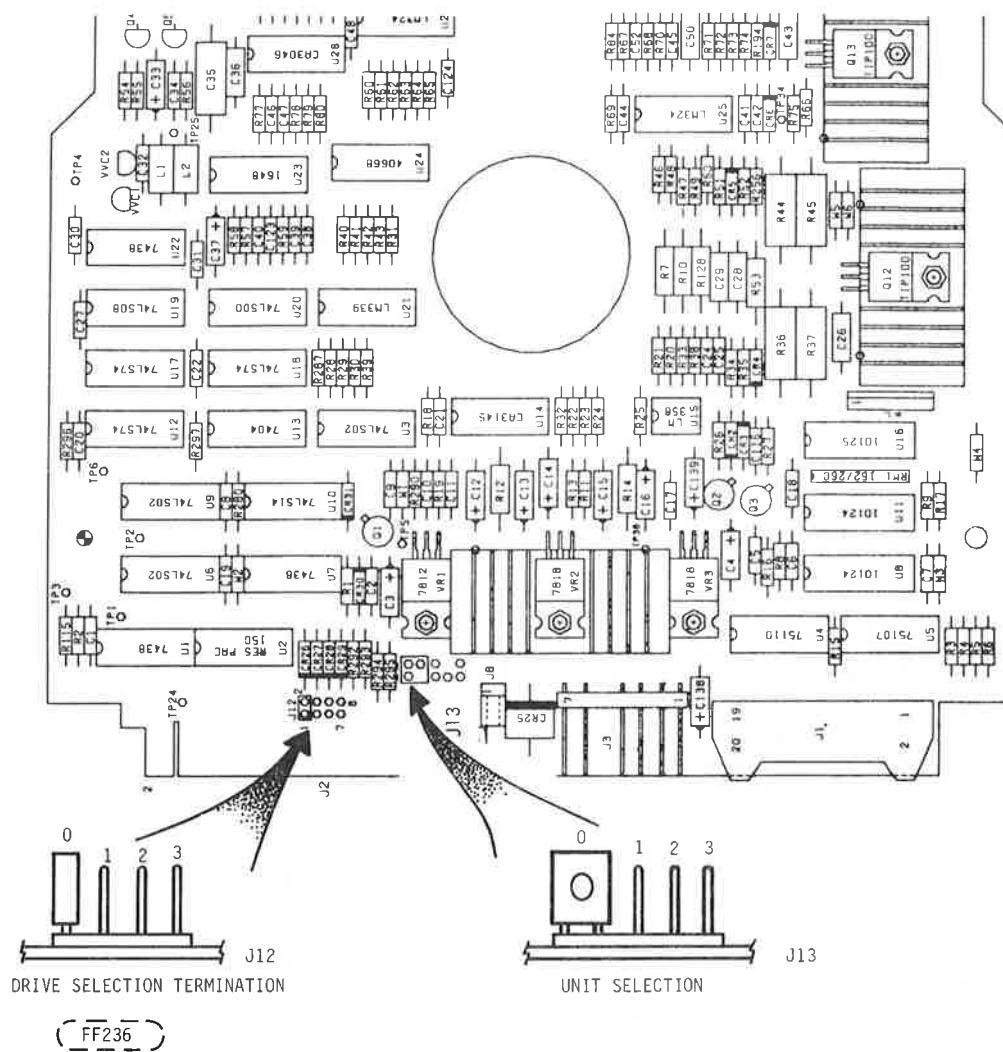


FIGURE 3-9. KEYED JUMPER PLUG INSTALLATION



FF226a

FIGURE 3-10. DRIVE SELECT TERMINATION

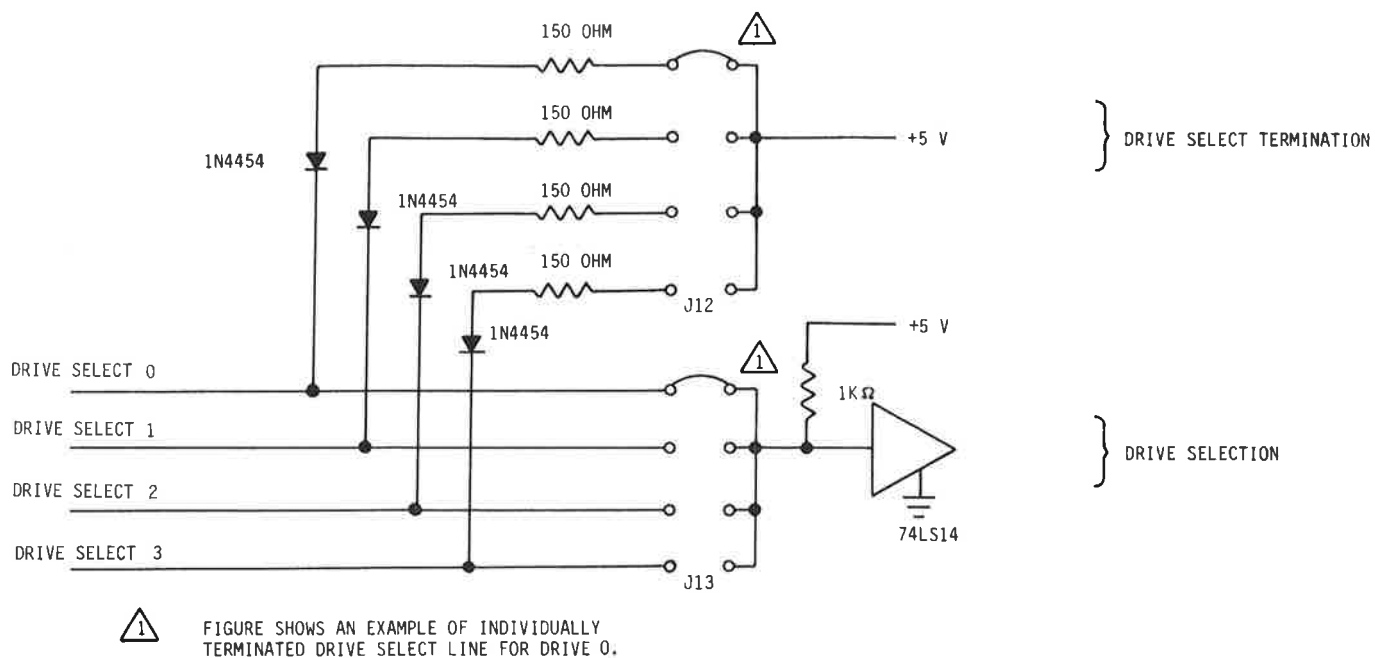

# USER COMMENTS

TECHNICAL PUBLICATIONS FILE REFERENCE

**FROM:**

Date \_\_\_\_\_

Name \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_

State \_\_\_\_\_

Zip Code \_\_\_\_\_

Area Code \_\_\_\_\_ Phone \_\_\_\_\_

**NOTE:**

This form is not intended to be used as an order blank. Control Data Corporation welcomes your evaluation of this publication. Please indicate any errors, suggested additions or deletions, or general comments below.

Business-related questions are to be directed to your Local Sales Office.

Equipment

Identification \_\_\_\_\_

Part Number \_\_\_\_\_

Serial No. \_\_\_\_\_

Document : (Title/Number/Revision) \_\_\_\_\_

**COMMENTS:**

NO POSTAGE REQUIRED IF MAILED IN THE UNITED STATES

(Fold, staple, and mail.)

STAPLE

STAPLE

FOLD

FOLD

**BUSINESS REPLY MAIL**

No Postage Stamp Necessary If Mailed in the United States

POSTAGE WILL BE PAID BY

**MAGNETIC PERIPHERALS INC.**

P.O. BOX 12313

OKLAHOMA CITY, OKLAHOMA 73157

Attention Technical Publications, OKM250

**FIRST CLASS**

Permit Number 1332

OKLAHOMA CITY,  
OKLAHOMA



CUT ALONG LINE

FOLD

FOLD